
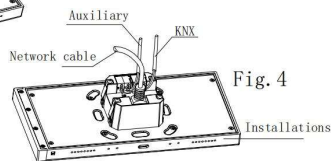
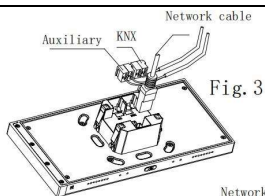


Installation instructions

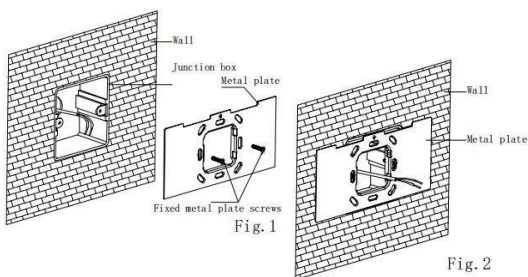


1. Install metal plate to the junction box on the wall with mounting screws.


Installation specification:

- (1) Remove the metal plate and fixed metal plate crews, thread the cable through the metal plate and fixed the metal plate to the 80 or 86 box with the screws. It is suggested that junction box should be parallel with the wall horizon, as shown in Fig.1;
- (2) Install the metal plate, as shown in Fig.2;
- (3) Screwdriver should not drive too strong when installed, otherwise it will result in the deformation of the metal plate. The recommended strength is $0.6 \sim 0.8 \text{ N.M}$ ($6 \sim 8 \text{ Kg.f.cm}$).

2. Remove the KNX bus connection terminal on the device and connect it correctly according to the wiring instructions, as shown in Fig.3; After wiring, install the KNX bus terminal of the connected wire into the installations, and connect the network cable with the installations, then the wiring installation is finished, as shown in Fig.4;

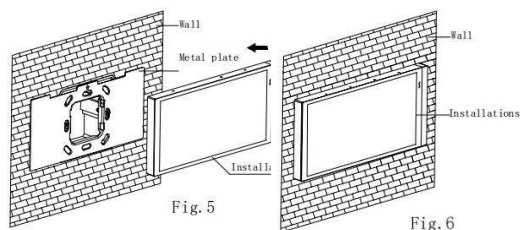

Disassembly instructions

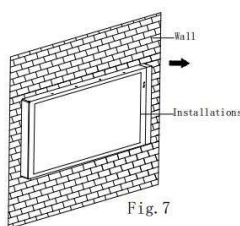


3. After connection of the device complete:

- (1) Align the back of the installations to the mounting hole position of the metal plate, requiring the device to be parallel to the wall or the metal plate, push the installations into metal plate and attention should be paid to the shrapnel installation hole of the metal plate, until the shrapnel on the installations is clamped into the metal plate, as shown in Fig.5;
- (2) Complete installations installation, as shown in Fig.6;

4. After finishing the installation, if disassembly is required, please perform this step:

Pull the installations out toward the horizontal direction and spring buckle and magnetic attraction fall off, then the disassembly is finished, as shown in Fig.7;


安装说明

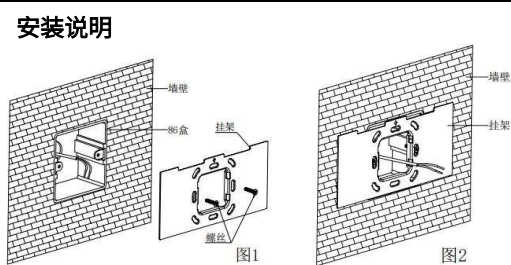


1. 将挂板通过安装螺丝安装到墙上预埋盒。

安装规范：

- (1) 先取出挂架及挂架固定螺丝，将线穿过挂架，并用螺丝将挂架固定在 80 或者 86 盒上。预埋盒建议要与墙壁平面平齐。如图 1 所示；
- (2) 安装好挂架。如图 2 所示；
- (3) 安装时螺丝刀力度不能过大，导致挂板变形。建议的力度为 $0.6\sim 0.8\text{N.M}$ ($6\sim 8\text{Kgf.cm}$)。
- (4) 采用 86 接线盒安装时，固定挂板螺丝需采用我司配套的 M4 专用螺丝。

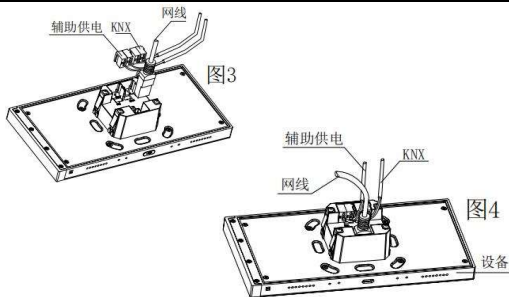


2. 将面板上的 KNX 总线连接端子取下，按接线说明进行接线。如图 3 所示；完成接线后，再把接好线的 KNX 总线端子插入设备，并将网线与设备连接好，即可完成接线安装。如图 4 所示；

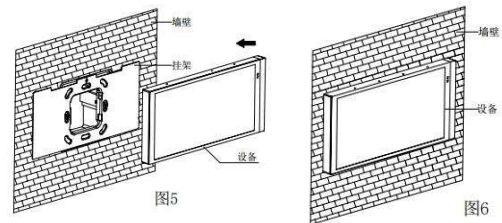

3. 面板接线连接好后：

- (1) 将设备背面对准挂架安装孔位，要求设备平行于墙面或者挂架，将设备推入挂架，同时要注意设备的弹片要对准挂架的弹片安装孔，对准后压入，直到设备上的弹片卡入挂架卡扣内。如图 5 所示；
- (2) 完成设备安装。如图 6 所示；

拆卸说明

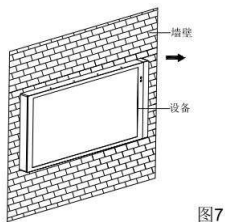

4. 安装完成后，如需要拆卸，请执行此步骤：

将设备水平向外拉拔，弹簧卡扣和磁吸脱落，即可完成拆卸。如图 7 所示；